

 
## FUJIDENSHA

Thank you for purchasing the Radio Controlled Snooze Alarm Clock with Thermometer.

### Features:

- Radio controlled time with manual setting option
- 12/24 Hour time display selectable
- Day of week in Japanese
- LCD back light
- Button for radio controlled time reception
- Selector for alarm on, snooze on and thermometer

### Appearance

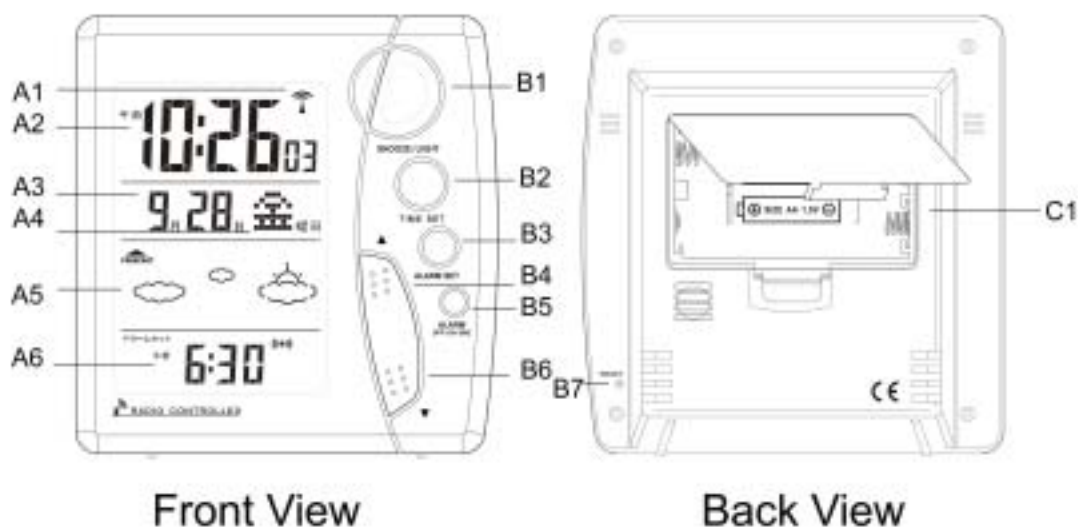

### Part A- LCD

A1: Radio Controlled Time icon.

A2: Radio Controlled Time

A3: Month and Day

A4: Day of week

A5: Weather forecast

A6: Alarm Time

### Part B- Buttons

B1: “Snooze/Light” button

B2: “Time Set” button.

B3: ”Alarm Set” button

B4: “ ” button

B5: “Alarm OFF/ON/SNZ” button




 
 
B6: “ ” button

B7: “RESET” button

## Part C- Structure

### C1: Battery Compartment


#### Radio Controlled Time:

- The clock automatically starts scanning the JJY frequency signal after new battery inserted (  flashes on the LCD). The clock automatically scans the time signal at 2:00a.m. everyday to maintain accurate timing. For failed reception in 10 minutes, scanning stops (  on LCD disappear) and repeats again at 3:00a.m., 4:00a.m., and 5:00a.m.
- The clock manually scans the time signal by pressing “ ” and “ ” button at the same time. For failed reception in 10 minutes, scanning stops (  on LCD disappear) and repeats again in the next 4 hours (4 times) until received. e.g. scan at 8:20 failed, it will received again at 9:00; 10:00; 11:00; 12:00.
- Press “ ” and “ ” button at the same time button at the same time to stop scanning
- The clock automatically scans signal from 福島(40KHz) or 九州(60KHz)
- \*  flashes indicate now is receiving JJY signal  
 turns on indicate signal received successfully

#### Manual Time Setting:

- Hold "TIME SET" button
- Press or hold " " or " " to adjust hour, minute, second, year, month, day.
- Press "TIME SET" button to confirm each setting

#### Alarm Clock Setting:

- Hold " ALARM SET" button
- Press or hold " " or " " to adjust alarm time
- Press " ALARM SET" button to confirm each setting
- press "ALARM off/on/snz" to select (alarm off , alarm on, snooze) alarm function  
“  ” appear on lcd , Snooze function on "Zz" appear on the LCD, If select

alarm off ,LCD display temperature

- Press "SNOOZE" button when alarm is alerted. The alarm snoozes for 5 minutes, then it alerts again
- Simply press any buttons to stop alarming

**12/24 Hour Format:**

- Press " " to select hour display in 12 hour or 24 hour format.

**Thermometer:**

- Selected alarm off on "ALARM off/on/snz" button.
- Press " " button to select thermometer in Celsius °C /Fahrenheit °F mode

**Back Light:**

- Press "SNOOZE LIGHT" button, back light states for 5 seconds

**Notes/Remarks:**

- All function keys do not work when the radio signal is being scanned
- Avoid placing the clock near interference sources/metal frames such as computer monitor or TV sets
- Placing the clock closer to a window/towards the general direction of the Transmitter. The signal is weaker in basement
- Never use the clock in bathroom or any other area with high humidity
- The operating temperature of the clock is 0C-50C