

1 SEGMENT TV AND DIGITAL PHOTO FRAME

User Guide

PLEASE READ AND FOLLOW THESE INSTRUCTIONS BEFORE YOU USING YOUR UNIT.

Table of Contents

Introduction and important guidelines	2
Maintenance and precaution	3
Cleaning the LCD screen	3
Locations of functions	4
Remote control buttons	5
Replace the battery of the remote control	6
Starting the unit	7
1 segment(please refer to Daewoo I/B which I sent to you 2 weeks ago)	7
Saving favorite photos	8
Zoom	8
Play photo	8
Play music	8
Play video	9
Auto power ON/OFF	10
Set alarm	10
Use setting	11
System setup	12
Photo setup	13 - 14
Picture setup	15
Clock setup	16

Introduction and important guidelines

The digital photo frame lets you view digital picture directly from your camera's memory card. You will be able to create a slideshow using multiple transition effects or display one picture at a time. No computer ,digital camera or internet connection is required. Before starting the unit, please make sure using correct file formate. Our machine supports the following files:

MP3,

WMA (Audio),

Standard JPEG, BMP ,GIF(photo)

MPEG --1/2/4 decode,AVI (vedio)

The digital photo frame is compatible with the following popular memory card format:

Memory stick (MS),Multi-Media Card (MMC), and Secure Digital (SD).

It can also read files stored on a USB flash drive using the USB host part.

Note:

- The unit may not replay all images or video files download from the internet Make sure to use files which are supported by our machine.
- Some digital cameras save images into non-standard format. Please refer to your camera's instruction manual for speciefies. Due to slightly differing standards and capacities there may be USB flash drives not work with our machine.
- High resolution pictures require longer loading time. It will be displayed in longer time than low resolution pictures





Maintenance and Precaution

- The 1 segment TV and Digital Picture Frame is for indoor use only.
- To reduce the risk of fire or electric shock; do not expose this appliance to rain or moisture.
- Do not block the ventilation holes on the back of the unit at any time.
- Keep your unit out of the sunlight. Direct sunlight may cause damage.
- Do not open the case of the unit. There is a risk of electric shock. and there are no user serviceable parts inside.
- Opening the case will void your warranty.
- Do not use the unit if conditions could allow condensation to occur, or damage may result.
- Your unit is a complicated electronic device and cannot withstand shock from drops.

Cleaning the LCD screen


- Treat the screen gently. The screen on the unit is made of glass and can be scratched or broken.
- If fingerprints or dust make the LCD screen dirty, we recommend using a soft, non-abrasive cloth such as a camera lens cloth to clean the LCD screen.
- If you use an LCD Cleaning Kit sold on the market, apply the cleaning liquid to the cloth. Do not apply the liquid directly to your LCD screen.

Locations of the functions

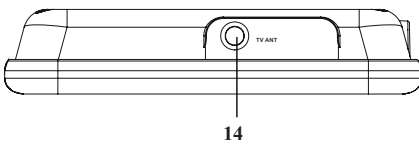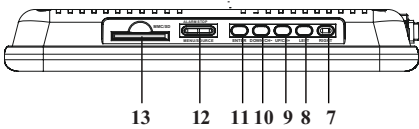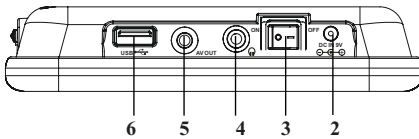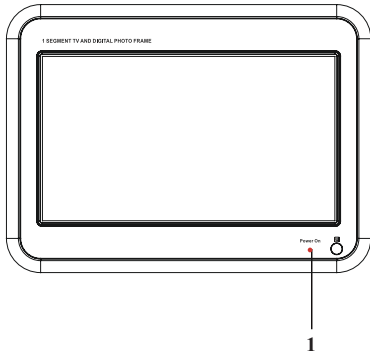

1. POWER ON INDICATOR
2. DC IN(12V) Jack
3. Power switch
4. Earphone out Jack
5. AV OUT Jack
6. USB Jack
7. Navigation(right)
8. Navigation(left)
9. Navigation(up)/CH+
10. Navigation(down)/CH-
11. ENTER button
12. MENU/SOURCE/ALARM STOP button
13. SD/MMC/MS CARD Slot
14. TV Antenna

Remote control Buttons

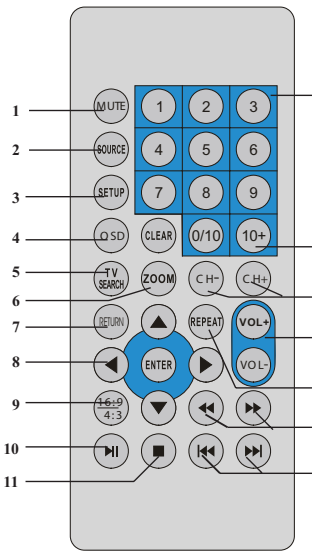

1. **Mute**-Reduces the audio to a minimum level.
2. **Source**-Select TV or digital photo playing.
3. **Setup** - Brings up Digital Picture Frame or TV receiver system.
4. **OSD**- Displays the photo,music,video information.
5. **TV Search** - Search all TV signals in your area.
6. **ZOOM** - Enlarges the picture on the screen.
7. **RETURN** - Return you to the menu of what being read.
8. **ARROW/ENTER Buttons**- Highlight on-screen menu items /selects the item that is highlighted on-screen.
9. **16:9/4:3**- selects the photo output mode.
10. **PLAY/PAUSE**- Playback,also pauses playback.
11. **STOP** ■ - Stops playback.

12. **Numeric buttons**(1-9,0,10+)- Input track number or TV channel numbers. Press the “10+” button first if you want to input numbers more than ten.For example:to input 13,press the “10+” button first and then the “3” button. To input track 20,press the “10+” button twice and then “0” button.

13. **CH+/CH-** button - Skips to the next or the previous channel.

 
14. **VOL+/- button** - increases or decreases the volume as desired.

15. **REPEAT** - Repeats the photos,tracks or videos.


16. **◀▶** - Fast forwards or fast reverses playback.

17. **◀▶▶** - Skip to the previous or the next photo,track or video.


Replace the battery of the remote control

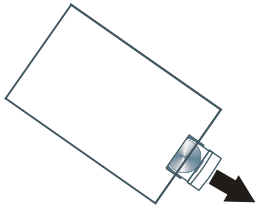

 
1. Remove the battery compartment cover by pulling the cover in the direction of the arrow.

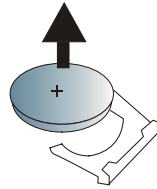

 2. Remove the battery

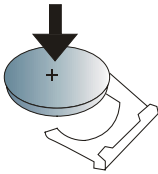

 3. Insert the replacement battery taking note of the correct polarity(+/-).

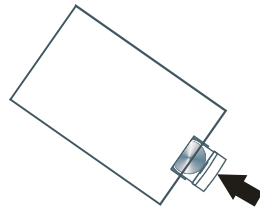

4. Replace the cover

Starting the unit

- 1.Connect AC-DC adapter to the DC socket.
- 2.Press the power switch to the ON position.The unit displays the opening screen.



Saving favorite photos

It allows you to save 3 photos in the FAVORITE folder. When playing photos (either source from USB or SD/MS/MMC). Press "ENTER" button to save current photo in the folder. Along with the photo a message appears on the screen "Don't power off".

Note: The zoom, rotate functions do not apply for the favorite photos. Only 3 pictures can be stored in the folder, the later picture you saved will replace the prior picture automatically.

ZOOM

The ZOOM playback function is used to magnify an image and includes several options (2x, 3x, 4x, 1/2, 1/3, 1/4 and normal). Each time you press ZOOM, the picture is magnified even more. To see other parts of the picture when you have the zoomed in on the image, try pressing the up, down, right or left buttons to go in corresponding directions. This feature is called pan and scan.

PLAY PHOTO

1. Insert a memory card or USB driver that contains JPG image files to the card slot or USB port respectively.
2. Turn the unit ON.

Operate by using the remote control

- At the opening screen select CARD or USB you had inserted, Press the ENTER button, select the PHOTO icon or press the PHOTO key, then a series of thumbnail pictures displays on the screen with background music if you have MP3 files in the card/USB.
- select a photo with the UP/DOWN/LEFT/RIGHT button and press ENTER.
- Press ►► to display next photo. Press ◀◀ to display previous photo.

PLAY MUSIC

1. Insert memory card or USB driver that contains music files to the card slot or USB socket respectively.
2. Turn the unit ON.

Operated by using the remote control

- At the opening screen select CARD or USB you had inserted.
- Press the ENTER button,select the MUSIC icon or press the MUSIC key, then a list of available file names will displays on the right of screen. And the first file will be play automaticall.
- Press UP/DOWN key to highlight the file you wanted to and then press the ENTER key to select.
- To pause/play press the ►|| button.
- To stop play press the EXIT button,retures to screen 2.

PLAY VIDEO

1. Insert memory card or USB driver that contains video files to the card slot or USB socket respectively.
2. Turn the unit ON.

Operated by using the remote control

- At the opening screen select CARD or USB you had inserted.
- Press the ENTER button,select the VIDEO icon or press the VIDEO key, then a list of available file names will displays on the right of screen. And the first file will be play automaticall.
- To pause play press the ►|| button.
- To stop play press the EXIT button,retures to screen 2.

AUTO POWER ON/OFF

To activate these functions the setting must be of the time required to turn ON/OFF the unit. Enter POWER OFF sub-menu. Select the time setting and change to desired time for auto power off. Enter POWER ON sub-menu select the time setting and change to desired time for auto power.



SET ALARM

Enter ALARM SETUP sub-menu and select the time setting. Change to desired time for alarm. To stop alarm press any key.

Note: Functions only available when PHOTO, MUSIC or VIDEO is inactive.



USER SETTINGS

Entering and leaving the SETUP menu:

- (ii) Press the setup button on the remote control to enter,press again to leave.



Entering and leaving the sub-menu options:

- (i) Navigate with the UP,DOWN,LEFT and RIGHT buttons on the remote or the buttons on the photo frame.Use the ENTER button to select.
- (ii) Press the exit button on the remote control to leave the menu.



SYSTEM SETUP

TV SYSTEM: It is used to select the TV system in order to compatible with other apparatus.



OSD LANGUAGE: ENGLISH, JAPANESE




 
 
DEFAULT : RESTORE -- Restore factory settings.



PHOTO SETUP

PHOTO TRANSITION EFFECT:

 - * WIPE BOTTOM
- * WIPE LEFT
- * WIPE RIGHT
- * LEFT TOP
- * OFF

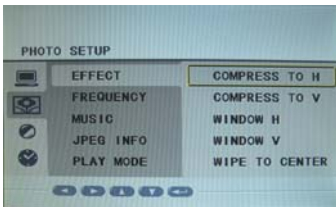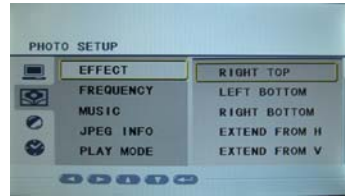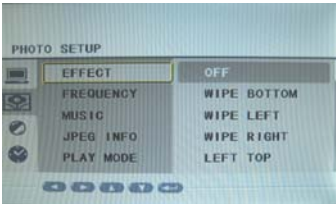

FREQUENCY: Time between photos.

Default/10 second/ 30 second/1minute/ 30 minute

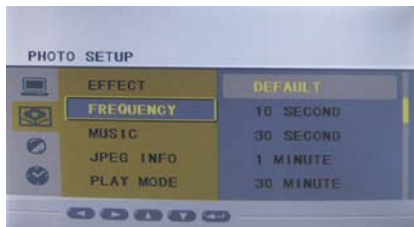 


PHOTO SETUP

MUSIC: To turn ON or OFF the music when playing photos.



JPG INFO: Display photo information: file name, size and resolution.
ON/OFF



PLAY MODE: Cycles through photos in sequence or in a completely random manner. Option: NORMAL/RANDOM



PICTURE SETUP(factory settings in brackets)

BRIGHTNESS --12 levels (6)

CONTRAST -- 12 levels (6)

HUE -- 12 levels -6 to +6 (0)

SATURATION -- 12 levels (0)

SHARPNESS -- 8 levels (0)



CLOCK SETUP

DATE SETUP:sets date. Year/Month/Date

TIME SETUP:sets real time.

ALARM SETUP:Setup alarm time or turn off the alarm time.

POWER ON:set unit to switch on automatically.

POWER OFF:Set unit to switch off automatically.

