



---

*MINI COMPONENT SYSTEM*

# USER MANUAL

## FOREWORD

 
### THANKS

Thanks very much for purchasing this product!  
Your choice of the product sufficiently displays your expertise in acoustic equipment.  
We will be much honoured to provide you with more satisfactory products. To bring the functionality of your device into full play, it is suggested that you try to find some time to read this user manual before connecting and operating your system, so that you can grasp system connections and requirements in use, and get enhanced enjoyment and pleasure in using the product from the very beginning.

### PLEASE

Please unpack carefully, and keep all the accessories in the same place.  
Please check any possibilities in shipping damage. If your devices are damaged or cannot be operated, please notify your local dealers immediately. If the device are to be shipped to your place directly, please contact the carrier as soon as possible. Only the consignee (individual or company to receive the devices) is entitled to claim indemnity to the carrier in the light of shipping damages.  
We recommend that you keep the original cartons and packing materials soundly for future shipping.

### ACCESSORIES

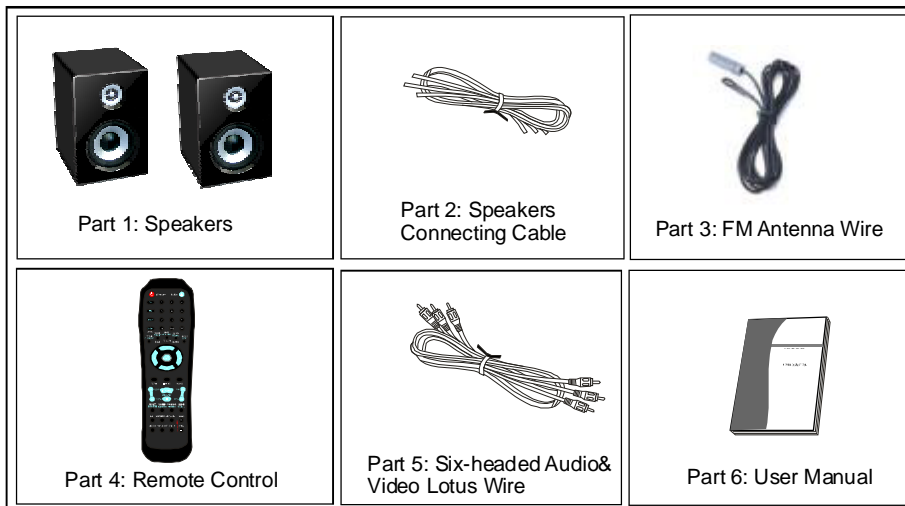

## TROUBLE SHOOTING

Please use the following methods to solve the following problems while using this unit.

Fault phenomenon	Possible cause	Handling
Power supply cannot be turned on	Power plug is not fully inserted into the socket	Insert the power plug into the socket securely
The remote controller does not work	Battery is used up	Replace with a new battery
	The front end of the remote controller is not aimed at the infrared reception part of the player	Please aim at the remote control window
No image on the TV screen	No video cables are connected or not securely connected	Perform connection according to system connection diagram
	TV not set at video mode	Set the TV at the video mode
	The scanning mode of the device does not match the TV scanning mode	Press line by line/alternate line key to convert scanning mode
Play cannot be realized	No disk is placed into the guide slot	Place the disk into the guide slot
	No disk is in	Place in a disk
	Inverse placement of disk	Be sure that the side with pictures of the disk points upwards
No sound from loudspeaker	Video cable not connected or not connected securely	Connect the cable as per the diagram
	Wrong operations with external amplifier	Correct operations of amplifier
Discontinuous sound and distorted pictures	Disk not clean	Use a piece of clean and soft cloth to clean the disk
	Disk scratched	Replace the disk with a new one
	Disk distorted	
Invalid displayed on the TV screen	Wrong operation	Please refer to the function operation description for more details
Operation cannot be done	Embedded micro computer fails due to lightning, static or other interference	Power off, and restart the computer

## SPECIFICATION

Disc Type	DVD VCD1.0, 1.1, 2.0 SVCD MP3 MPEG 4* CD-RW DVCD
Video Format	MPEG 2 for DVD, MPEG 1 for VCD
Audio Format	MPEG 1, MPEG 2, PCM, STEREO
Signal Output	Video system: NTSC, PAL, AUTO Video output: 1.0 V p-p Audio: Stereo
Output Joint	Stereo, Video output, optical fiber output, coaxial output
Outer Facilities	USB, Earphone
Power Supply	AC100V/60Hz
Max. Power	60W
Frequency Response	± 3 dB (20 Hz--20 KHz)
Audio S/N	80 dB Weight A
Operating Condition	Temperature: 5--35 °C Operating status: Level

### Note:

 
Some MPEG 4 discs are the specification of \*.rm/\*.ra/\*.ram/\*.rmm/ etc in the market that this device can not support. Please select carefully when you purchase. The product specifications may be subject to change and no additional notices will be given.

## CONTENT


FOREWORD .....	1
CONTENT .....	2
WARNING .....	2
PANELS .....	3
REMOTE CONTROL .....	4
CONNECTION WITH TV .....	5
CONNECTION WITH AMPLIFIER .....	6
SYSTEM CONNECTION .....	7
BASIC OPERATION .....	8-14
DVD MENU SETUP .....	15-19
RADIO OPERATION.....	20
SPECIFICATION .....	21
TROUBLE SHOOTING .....	22

## WARNING


Please read and understand all the warnings given in the following and those marked on the unit. This unit has been designed and manufactured to assure personal safety.

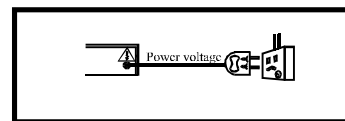

 
Only use the power by sign on user manual or system.

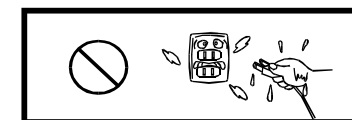

 
Keep unit and power plug away from water.

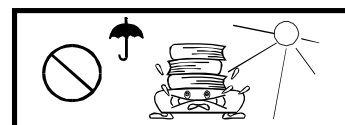

 
Avoid direct sunshine and nearing heater.

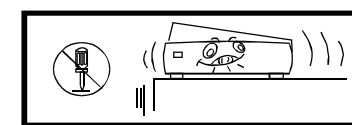

 Never open the cover, avoid metals dropping in, like needle, hairpin, coin, etc.

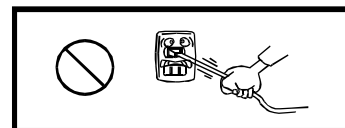


 Protect power cable: avoid high pressure and stamp on; do not pull & bend excessively.

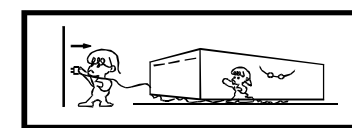


Unplug the set from the outlet when you do not use it for a long time.

## PANELS

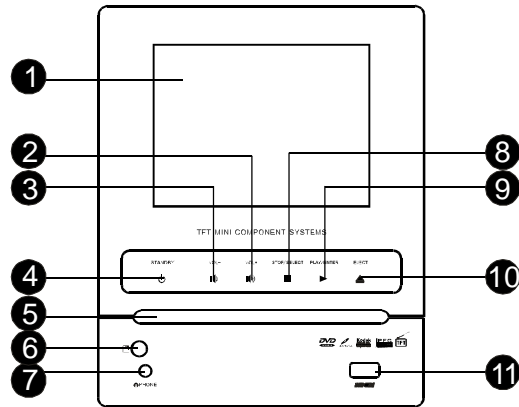 

 1. DISPLAY SCREEN
2. VOLUME+
3. VOLUME-
4. STANDBY
5. DISC TRAY
6. REMOTE CONTROL SENSOR
7. EARPHONE SOCKET
8. STOP/SELECT
9. PLAY/ENTER
10. EJECT
11. USB PORT

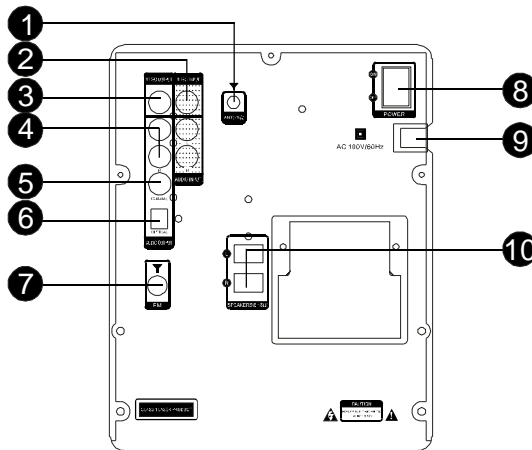

1. ANT INTERFACE
2. VIDEO INPUT
3. VIDEO OUTPUT
4. L/R AUDIO OUTPUT
5. COAXIAL OUTPUT
6. OPTICAL FIBER OUTPUT
7. FM ANTENNA INTERFACE
8. POWER ON/OFF
9. POWER SUPPLY INPUT
10. L/R SPEAKER OUTPUT

## RADIO OPERATION

1. Enter FM Function  
In the turn-on or play status, press the **FM** button on the remote control to enter FM status.
2. Select Bands
  - 1) directly input frequency: press the **T/F** button on the remote controller, input the frequency that you want directly.
  - 2) select band by pressing **Tune-** or **Tune+** button: under some frequency, press the button, the frequency will be up or down on the step. The step of FM is 0.05 MHz. If keep to press these buttons, the device will switch to search bands from up or down automatically.
  - 3) select band by pressing number buttons: you may select the bands that have been saved by pressing the number buttons. For example: press **10+** button twice, **5** button once, you may select the 25th band. Press the **CH-** or **CH+** button, the band will be switched up or down.
  - 4) automatically search bands: press the **Search** button, this unit will start to search bands from the lowest part to highest part automatically. Meanwhile the searched bands will be saved orderly. Press this button again to stop searching.
3. Save Bands  
press the **Save** button, that means saving the current frequency of band. For example: if you want to save 99.3 0MHz in 28th, please press **10+** button twice, **8** button once, then press **T/F** button to input 9 9 3, then press **Save** button to save this frequency.
4. Soundtrack Selection  
press **MO/ST** button, you may select Mono and Stereo soundtrack output in FM status. If the signal is not strong enough, you can not select Stereo.
5. Exit FM Status  
press the **TV** or **AV-IN** button to exit FM status and enter other modes.

Remark: FM Frequency range : 76.00-108.00 MHz.

 
- NOTE:
1. You may adjust the best radio effect by adjusting the FM antenna.
  2. You can search further bands by pressing **Search** button when adjusted the FM antenna in a right position.
  3. If the band is not clear by auto search, you choose the way manual search adjustment by press **Tune-/Tune+** button.

## DVD MENU SETUP

### Password

Select this option to change the password. You must know the old password in order to change it. The original password is 138900.

### 6. Exit Setup Page

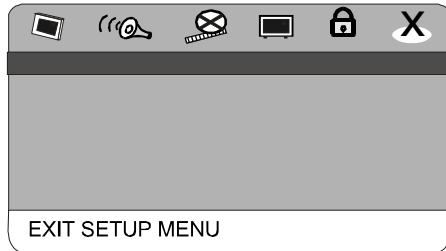


This option is used to exit the Setup menu; you can also press the SETUP button on the remote control to exit.

## REMOTE CONTROL

 
### NOTE:

1. Turn on the player and have batteries installed in the remote control, put the emitter against the sensor of player for remote control.
2. The distance of remote control should not exceed 7 meters, or else, it will be invalid.
3. If the sensor or remote controller emitter is stuck with foreign matters, it may result in the malfunction in signal reception or not at all.
4. The remote control function may be affected under the strong interference signals, such as power supply and other strong high-frequency signals.

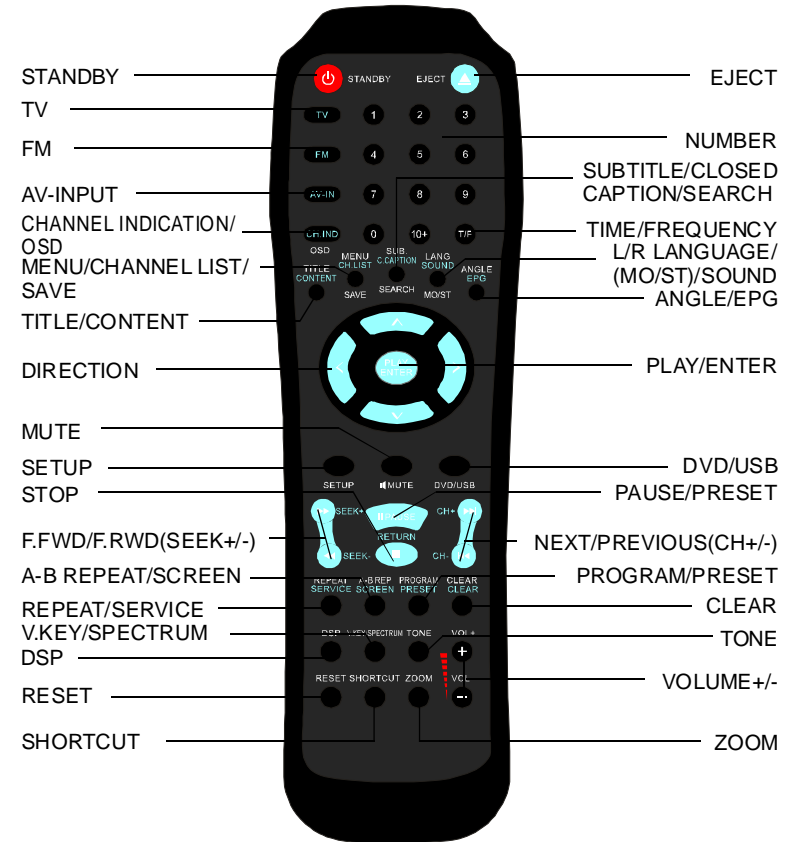

## CONNECTION WITH TV

 1. If your TV has AV terminal, connect this unit to TV with A/V cables, and set TV to be AV status after confirming the connection is correct. (Figure 1)

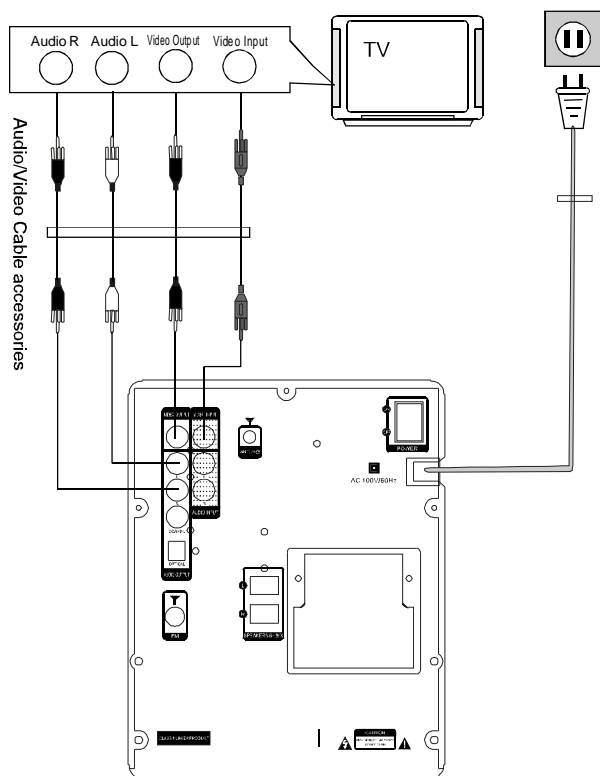

### Note:

 
1. It is a must to turn off the power switch of both player and TV before they are connected and unplug the power line from the socket.
2. You may adjust the corresponding system according to your TV system while watching various discs.
3. If there are multiple connections between video player and TV, please select one and unplug others so as not to affect the quality of images and sound.
4. Do not switch on and off or press power switch frequently, switching on and off each time must have an interval of 3 seconds.
5. Do not connect the digital optical or coaxial output jack of this player with the analogue signal input terminal for reception.

## DVD MENU SETUP

(This setup page only be available when the player in No Disc or Eject status.)

1. TV Type  
Select the corresponding TV system to fit your system, PAL, AUTO, NTSC system are available of this device.
- 2.PBC  
This option is used to open or close PBC.
3. Audio  
Select the desired audio language (English, French, Spanish, Chinese, Japanese, Korean, Russian, Thai and Others).  
Note: The DVD audio language must be recorded in the selected language, otherwise the default language will be on.
4. Subtitle  
Press the Subtitle key repeatedly to select a subtitle language (English, French, Spanish, Chinese, Japanese, Korean, Russian, Thai and Others).  
Note: The Subtitle language must be recorded in the selected language, otherwise the default language will be on.
5. Disc Menu  
Select the desired menu language (English, French, Spanish, Chinese, Japanese, Korean, Russian, Thai and Others). If there is no such an option in the disk ,the default language of the disk will be played.
- 6.Parental  
This unit has 8 different age ratings for selection. You can move the cursor to select one of them, then press “Play/Enter” key on the remote control to enter. The DVD player will remind you to input the password.
7. S/W Version: This option is used to displayed the model of this unit and its factory name.
8. Default: Select this option to reset all the preferences to their original factory setting.


### 5.Password Setup Page

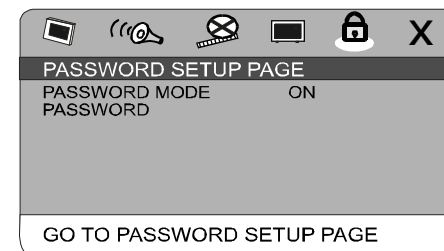

## DVD MENU SETUP


- 3) Super Bass  
ON: set the super bass on, and adjust the super bass effect.  
OFF: set the super bass off.
- 4) Treble Boost  
ON: set the treble boost on and adjust the treble effect.  
OFF: set the super treble boost off.
5. 3D Processing: This option has different reverb modes: Concert, Living Rom, Hall, Bathroom, Cave, Arena, Church.
6. HDCD Filter  
This option has three settings: OFF, 44.1KHz, 88.2KHz, please set it according to the disc so that getting more clear and more exquisite sound.
 
### 3. Video Setup Page

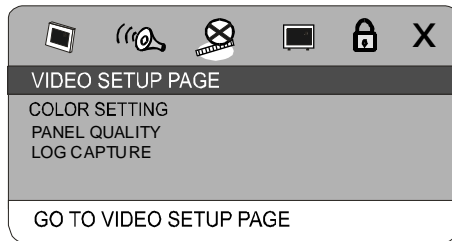


1. Color Setting  
You can adjust the video output of sharpness, brightness, contrast, gamma, hue, saturation, luma delay according to your favour.  
NOTE: The adjustable range of sharpness is: High, Medium and Low.  
The adjustable range of brightness is: +/-20 (default is 0).  
The adjustable range of contrast is: +/-16 (default is 0).  
The adjustable range of hue and saturation are: +/-9 (default is 0).  
The adjustable range of gamma is: High, Medium, Low and None.
2. Panel Quality: You can check the panel quality in this option.
3. Logo Capture: In the status of video playing, select this option can download the picture that you want.

### 4. Preference Setup Page

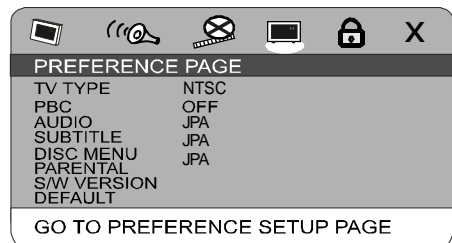 

## CONNECTION WITH AMPLIFIER

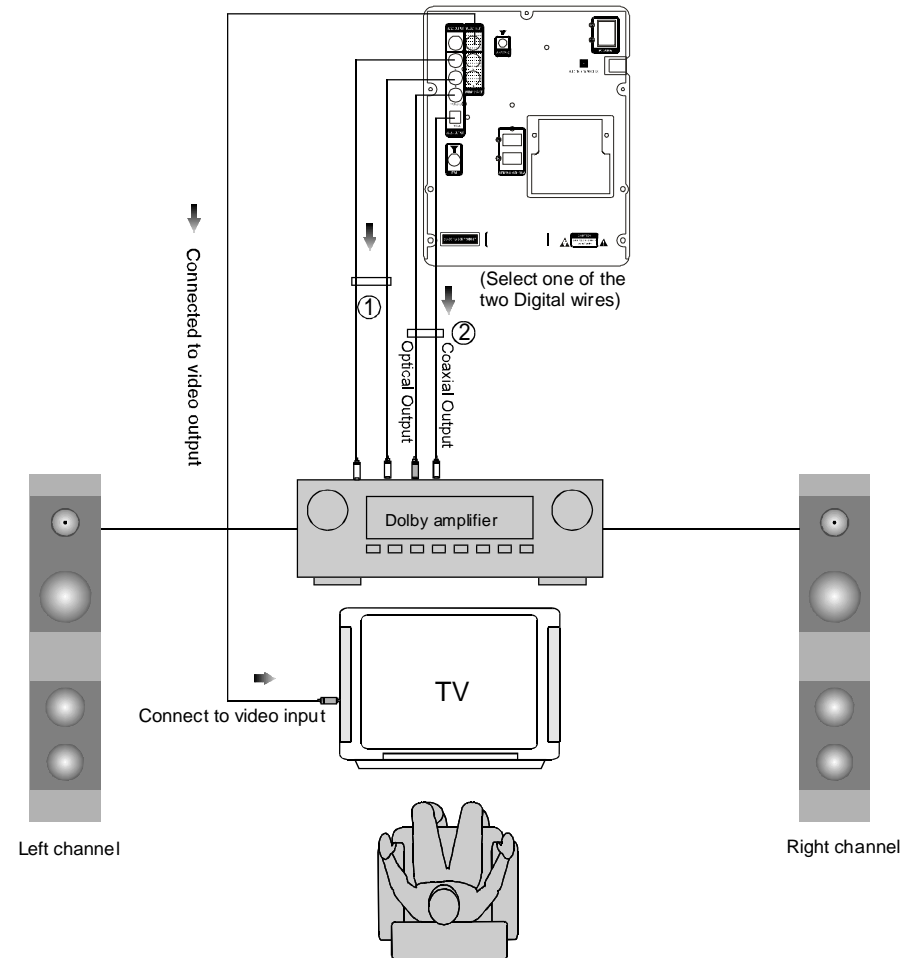 


### Setup of Digital Audio Output

Connect the optical and coaxial output jack to the amplifier. In the status of play or stop, press setup button on the remote controller to open the system setup page, switch to audio setup page by pressing the direction buttons, then move the cursor to Audio Out, select SPDIF/RAW or SPDIF/PCM, press Play/Enter button to finish. Press setup button again to exit this setup.

## SYSTEM CONNECTION

 
Please refer to the following figure to connect your acoustic equipment.  
To keep all the connection correctly and firmly.  
Power supply should be connected finally.

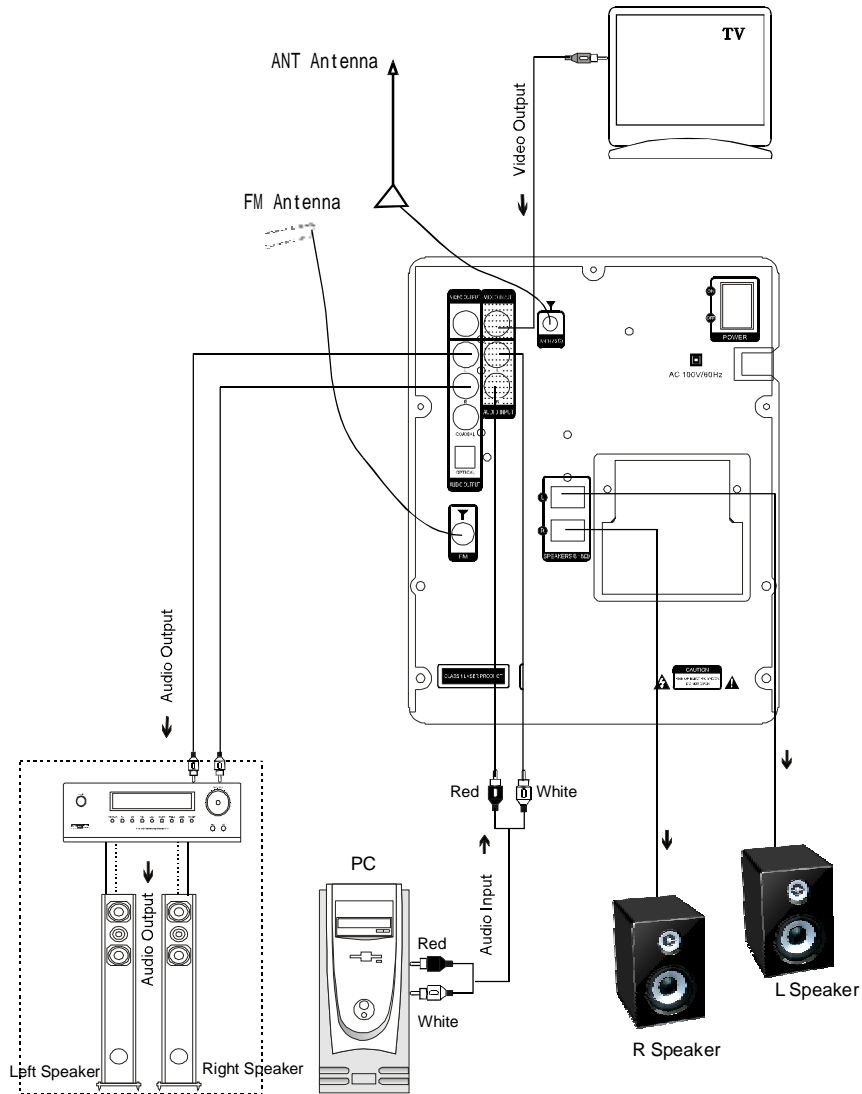

## DVD MENU SETUP

7. Logo Type  
In this option, you can select the default or captured picture as the opening desktop of the unit.
 
### 2. Audio Setup Page

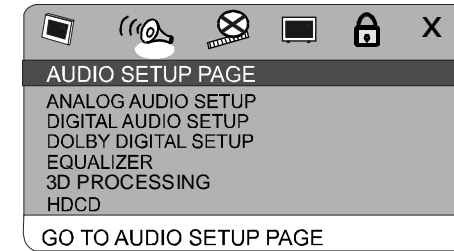

#### 1. Analog Audio Setup

- 1) Downmix
  - (1) LT/RT: audio output from Left and Right channel
  - (2) Stereo: stereo audio output
- 2) Dialogue  
This option is use to make the dialogue more clear..

#### 2. Digital Audio Setup

- 1) Digital Output  
When playing the DOLBY, or MPEG discs, the optical or coaxial terminal will be output in SPDIF/RAW format. Meanwhile the connected amplifier must be able to SPDIF/PCM may be selected when the player is connected with a 2CH digital stereo amplifier.
- 2) LPCM Output  
LPCM (linear pulse code modulation) is a non-compressed audio digital technology. There are two output mode: 48KHz, 96KHz.

#### 3. Dolby Digital Setup

- 1) Dual mono  
This option is used to set the mode of audio output, including Stereo, L-Mono, R-Mono and Mix-Mono.
- 2) Dynamic  
This option is chosen when Line output is selected for the compressing mode. Linear compressing ratio is adjusted to acquire different compressing effects.

#### 4. Equalizer

 
- 1) Sound Mode  
This option is used to select the different balanced effect, such as OFF, ROCK, POP, LIVE, DANCE, TECHNO, CLASSIC, SOFT.
- 2) Bass Boost  
It used to adjust the sound effect of Bass boost to be ON or OFF.



## DVD MENU SETUP

Press **Setup** button on the remote controller to open the menu setup function, the TV screen will display the following figures. Press **Left/Right** direction buttons to move the cursor to the different setup pages: Also press the direction buttons to move cursor to the item you want, then press **Play/Enter** button again to enter the subdirectory.

### 1. General Setup Page

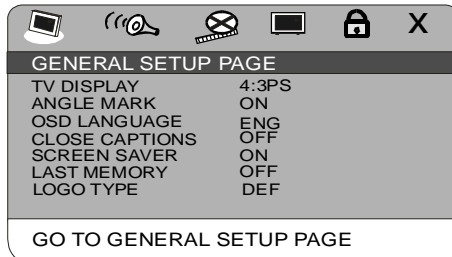

#### 1. TV Display

(4:3PS, 4:3LB, 16:9)

- 1) No matter which format you select, if the screen is 4:3 display, the image is able to be displayed in 4:3.
- 2) The DVD screen format is changeable.
- 3) When the screen is displayed in 4:3, the display format of DVD is 16:9, the image will be compressed.

#### 2. Angle Mark

If you select the angle mark, the multi-angle mark can be shown on the screen when the disc have the multi-angle pictures.

#### 3. OSD language

You can select English or Japanese for all the setup page.

#### 4. Closed Captions

When playing DVD discs, choose this OFF option to close caption, choose ON option to open the caption. The effectiveness is subject to the disc you are playing.

#### 5. Screen saver

This option is used to open/close screen saver program, options:

ON: in the status of stop or no disk, the screen saver program will be automatically turned on within the setting time.

There will be a video setting image, and the device will turn to power saving mode, thus protecting your electrical appliance and prolonging its lifespan. Press any button to cancel the screen saver.

OFF: the screen saver program will not be activated in any cases.

#### 6. Last Memory

Select this OFF option to close memory function, choose ON option to open.

## BASIC OPERATION

### PREPARATIVE

- 1). Before turning on, check whether all the connection are correct and reliable. Plug the power plug into the corresponding power socket.
- 2). Press **POWER** button on the front panel to turn on.
- 3). Press **EJECT** button on the remote control or panel to carry the disc tray outside, put the disc into the tray, press **EJECT** button again, this unit starts to read and play.

### MUTE

In play status, if **MUTE** button is pressed, there will be no audio output, the sound is eliminated, however the image will still be played normally. Then press this button again or press **Vol. +/-** button to exit the mute status, the sound resumes to be its normal status.

### STATUS DISPLAY

In play status, press OSD button, the TV screen will display the following data:

VCD/CD display: Single Elapsed, TR(Track Remain), Total Elapsed, DR(Directory Remain), Off.

DVD display: Title Elapsed, Title Remain, Chapter Elapsed, Chapter Remain, Off.

### SOUNDTRACK SWITCH

While playing VCD, DVCD, press **LANG(L/R)** button to select the multiple output modes such as Mono L, Mono R, Stereo and Mix-mono. Press the button once to switch one soundtrack.

While playing DVD, PRESS **I/R/LANG** button can select multiple languages for playback.(Only applies to the discs like DVD recorded in multiple languages.)

### FAST FORWARD & FAST BACKWARD

In play status, press **◀◀** button or **▶▶** button, there will be quadplex speeds of fast forward and fast backward, shown as follows,



### PREVIOUS & NEXT

In play status, press **◀◀** button, the song will skip to the previous one for play, press **▶▶** button, the song will skip to the next one.

### SUBTITLE SELECTION

When the played DVD disc records multiple subtitles, you can make selection of subtitle language by pressing **SUB** button, they are:

English, French, Spanish, Chinese, Japanese, Korean, Russian and Thai.

## BASIC OPERATION

### REPEAT

In play status, successively press **REPEAT** button to separately select the different contents for repetition.

- 1). As for DVD, successively press **REPEAT** button, the TV screen will separately display: CHAPTER, TITLE, ALL.
- 2). As for CD, VCD, CD-R, etc., Successively press this button, the screen will separately display: TRACK, ALL.
- 3). As for MP3, JPEG, etc., There are options: SINGLE, REPEAT ONE, REPEAT FOLDER, FOLDER, SHUFFLE, RANDOM.

### A-B REPEAT

In play status, press **A-B REP** button to realize the specific section repeat, that is, press this button once at the beginning of the section (i.e A), and press it again at the end of the section (i.e B), this player will automatically return to A and starts to repeat playing the section from A to B. Press the button again to exit.

### DIRECTION BUTTONS

Press the direction buttons **▲ ▼ ◀ ▶** to move the cursor to select pictures or menu.

### RESET

In No Disc status, press **RESET** button can return the original setup or default value.

### ZOOM

In the play status, every time the **ZOOM** button is pressed, the TV screen will be zoomed in or out proportionally. In case of zoom proportion more than 1, pressing direction button is able to move the picture, continuously press the button, "Zoom in 2,3,4,1/2,1/3,1/4 Zoom in: off " will be displayed.

### TITLE

If the played DVD disc contains a directory column, press the **TITLE** button to take out the items contained in this disc. Use the direction buttons to move the cursor to select the items you want to play, or directly use the number button to select.

### SOUND FIELD

Press the **DSP** button to select different sound field.

 
### NUMBER BUTTONS

- 1). In playing songs, press **Number** buttons to directly select the songs you need.
- 2). If the songs you want exceed 10 pieces, you may do it by pressing **10+** button once, and then press the number buttons (1--10). For example: If the 16th song is needed, you can press **10+** button first and then press 6 button.

## BASIC OPERATION

### MPEG4/JPEG PICTURE DISC PLAYING FUNCTION

- 1). Place the MPEG4/JPEG disc into the deck, this unit will begin to read, the main directory will be displayed on the TV screen.

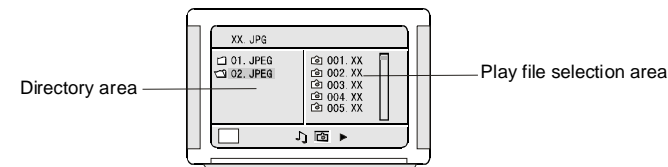

- 2). Press the direction button **▲ ▼** to move the cursor to the corresponding directory, press **Play/Enter** button to enter the next layer, and so on, until the desired picture is found for play.
  - During playing, number buttons or **◀ ▶** button can be used to select pictures.
  - JPEG pictures may distort at the edge to some TV sets, this is not the unit's fault.
  - This unit can play the digital photo discs with extension name .JPEG, and also support the pictures that made by Adobe Photoshop.
  - If you want to repeat playing some pictures, pressing the **Repeat** button is OK.
  - During browsing, press **Stop** button can go back to main menu.
  - After go into the subdirectory in playing MPEG4 disc, also you can do the operation such as fast backward, fast forward, pause etc.

### DVD TITLE MENU SELECTION FUNCTION

DVD disc features high capacity, records more than one movie, background data and songs. It is hereby given a name of TITLE, while more sections will be given under each TITLE, which are called Chapters. There are some songs in one chapter. During playing DVD discs, press the **Title** button, the TITLE menu will appear on the TV screen. (Available for the DVD discs that contain more than one title menu) You can use the direction buttons to move the cursor to the desired title menu, press **Play/Enter** button to play it. If the title menu is represented by numbers, then press the number buttons to select directly.

### DVD/USB

This is the latest function in new generation multimedia DVD-players. Connecting the USB device while playing a disc does not influence the quality of playing. In order to view the contents of the USB device, following steps need to be performed.

1. Press the **DVD/USB** button on the remote control once, the dialogue window will appear on TV screen. Use Up/Down direction button to select the required option.
2. Press the **PLAY/ENTER** button to switch on the selected option.
3. If a disc is not loaded, the player will automatically check the presence of a USB device. If one of the appliances is found, the player will automatically start playing its content or menu of the appliance.
4. To exit the USB mode: 1) Press the **DVD/USB** button again, and move the cursor to "DVD" item, and then press **PLAY/ENTER** button. 2) You can also press **TV**, **FM** or **AV-IN** button and switch to other modes.

 
Note: If you are using a USB extension cable, this cable should be limited to max. 0.5m.

## BASIC OPERATION


### VIRTUAL KEYBOARD

Virtual Keyboard is a function which we promote newly. You can carry on the majority of broadcasting control-operation by using direction button to move the cursor and **Play/Enter** button when appreciate the disc.

1) In normal playing mode, press **V.KEY/SPECTRUM** button twice to enter V.KEY mode, the screen will display Virtual key board, the following picture show:

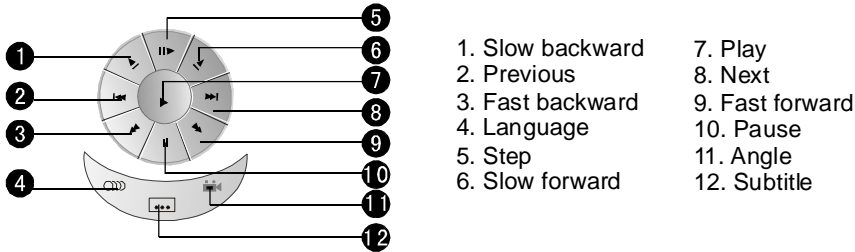

 
2) Move the cursor to select the function you want to operate, press **Play/Enter** button to confirm, eg, select Subtitle:



3) Press **V.Key/Spectrum** button to exit the virtual keyboard function.  
Note: While playing VCD disc, the key ❶ (Slow backward) is invalid.

### MP3 DISC PLAYING FUNCTION

 1). Press the **Eject** button on the panel or remote controller to open the deck, put in an MP3 disc, then press **Eject** button to close the deck. This unit begins to read it, and the TV screen will display the following figure,

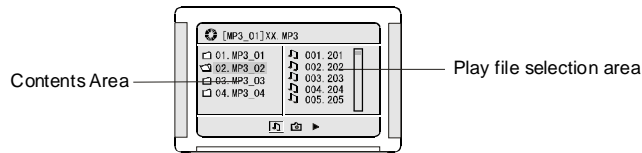

- 2). Press the direction keys **▲ ▼** to move the cursor to a certain directory, and press **Play/Enter** button to enter the directory. Press the direction buttons to enter the subdirectory or the file area, select a song with the cursor, press **Play/Enter** button to play the song.
- During playing, press **◀▶** or **▶▶** button to select other songs under the current directory.
  - During playing, press the left direction button, the icon will skip to the directory symbol **□**, press the up/down direction button to select other directories, press **Play/Enter** button for confirmation.

Note: When play MP3 discs, this unit also has the functions such as mute, pause, previous and next selection. The operations are identical with CD playing.

## BASIC OPERATION

### TONE

If you want to adjust the volume of Treble, Bass or Subwoofer. First to press the **TONE** button, select to the corresponding item and press **Vol+/-** button on the remote control can increase or reduce the volume of Treble, Bass or Subwoofer.

### STOP

In play status, press the **STOP** button, the TV screen will return to the turn-on picture, press **PLAY/ENTER** button, the player will begin to play at the stopping time, here the TV screen will display Resume. In play status, successively press **Stop** button twice and then press **PLAY/ENTER** button, the disc will be played from the start.

### PAUSE

In play status, press **PAUSE** button, the player will pause, and press it again or press **Play/Enter** button once to go on playing.

### MENU

Pressing **MENU** button on the remote controller can open or close PBC status.  
Note: 1). It will go into the root menu when play DVD discs.  
2). The discs of 1.1 version or some fake discs don't support this function.

### ANGLE SELECTION

In play status, successively press **ANGLE** button, you can enjoy the same action shot in different angles. (The function depends on the discs.)

### VOLUME ADJUSTMENT

You can press the **VOL-/+** button to turn up or down the volume of this unit.

### SHORTCUT

When play DVD discs, press the **SHORTCUT** button to jump over the initial title, menu or warnings.  
( Only for some discs, subject to the quality or recorded status of the played discs)

### STANDBY

Press the **STANDBY** button on the remote control, the unit will go into the standby status. Before you perform the operation, make sure the main power is on.  
Note: This standby function is one kind of saving electricity modes. When the device do not be used for a long time, please close the main power.

### SPECTRUM

In play status, press **V.KEY/SPECTRUM** button once, you can select different field effect or the spectrum of current playing song. (While in DVD playing, this function is invalid)

## BASIC OPERATION

### SWITCH AMONG TV, FM, AV-INPUT AND DVD MODES

Press the **TV**, **FM** or **AV-IN** button to enter One-seg TV, FM radio or Audio input mode.  
Press the **DVD/USB** button can exit above modes directly and switch to DVD mode.

 
 
### ONE-SEG FUNCTION

- Before operating the One-Seg function, please connecting the One-Seg facility with this unit. Press the **TV** button on the remote control to enter One-seg mode.
- The function buttons in One-Seg mode:
  - PRESET**: Search the receivable channel automatically, and store.
  - CH+** (CHANNEL+): Dial the preset channel up. During the EPG and channel list display, perform the ``PAGE UP`` function.
  - CH-** (CHANNEL-): Dial the preset channel down. During the EPG and channel list display, perform the ``PAGE DOWN`` function.
  - SEEK+/-**: Search and show the receivable channel in the direction of up or down.
  - SERVICE**: Switch the service in turn when there are several service.
  - SOUND**: Switch the sound function, main, sub, main/sub in turn.
  - C. CAPTION** (CLOSED CAPTION): Switch the caption, caption 1, caption 2, caption OFF in turn.
  - SCREEN** (SCREEN SWITCH): Switch the display range.
  - CH. IND** (CHANNEL INDICATION): Show the information of currently display channel.
  - CH. LIST** (CHANNEL LIST): Show the preset channel list.
  - EPG**: Show the current channel`s play time and name.
  - CONTENT**: Show the content of the program.
  - RETURN**: Return to the normal screen from the screen of the EPG, channel list, content.
  - CLEAR**: Clear the stored information. For example, preset information.
- To exit the One-seg function: Press the **AV-IN**, **FM** or **DVD/USB** button on the remote control to enter other modes.

### PROGRAM

- While playing VCD/CD, press **PROGRAM** button, the TV screen shows:
- While playing DVD, press **PROGRAM** button, the TV screen shows:

## BASIC OPERATION

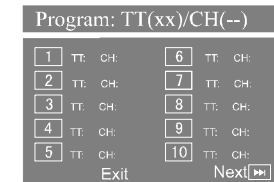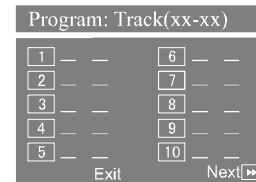

- If the player is in the PBC ON status, while playing the programmed songs this operation will result in PBC turning off.
- Input the number that you want at the place of the cursor; move the cursor to ``Start`` or press the **PLAY/ENTER** button, the songs will be played in the specified order.
- While in programming mode, press **CLEAR** button to eliminate the digitals that you are inputting.
- To exit programmed play: press **PROGRAM** button again, and the cursor move to ``Stop`` automatically; press **PLAY/ENTER** button, the cursor move to ``Exit`` automatically; press **PLAY/ENTER** button again to cancel programmed playing.


### TIME SELECTION

 In play status, press **T/F** button on the remote control, the TV screen displays,

#### VCD disc display:



#### DVD disc display:

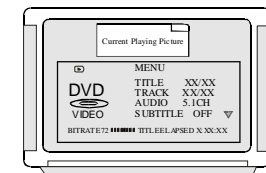

You can press the direction key to move the cursor to the setting option according to the above-mentioned screen suggestions, then press **Play/Enter** to confirm and use number keys to input the corresponding time numbers, after it is done, DVD player will start to play according to the setting time. When press the Down direction button, you can see the next item in the above screen.

There are 5 items in VCD screen: Track, Disc time, Track time, Repeat, Time DISP (Display); 9 items in DVD screen: Title, Track, Audio, Subtitle, Angle, TT(Total) time, CH(Chapter) time, Repeat, Time DISP(Display).

Note: The optional time range depends on the volume of discs.

#### CD disc display:

--:--  
T:--/xx

#### MP3 disc display:

---/xx  
--:--

#### MP4 disc display:

SELECT:--  
GO TO:--:--

While playing CD, MP3 or Mp4, press **T/F** button to switch between the ``Time Selection (current song/chapter)`` and ``Song/Chapter Selection``; then input the digital you want. The system begins playing from the specified time/song/chapter.